

# **Strol**

# **SurePave™**

## **Installation Guidelines**

G 046 004


Issue No.: 03

April 2022



# SurePave™

## Installation Instructions

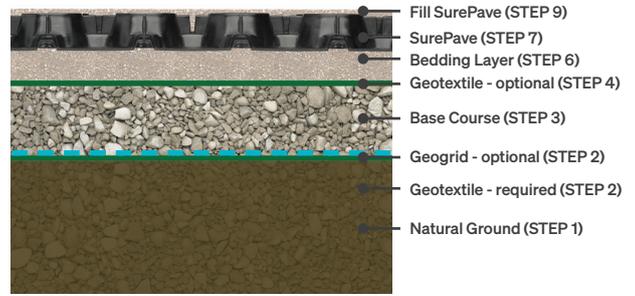

## Gravel Surfaces


- 1** Excavate ground to shape and level to achieve sufficient gradient and load bearing etc. SurePave is suitable for slopes less than 11 degrees in gradient.
- 2** Depending on the soil type and projected traffic loadings, a geotextile is required. For additional strength a geogrid can be used.
- 3** Place and compact a suitable base course material as per Note 1 below ensuring that the area is shaped to sufficient gradients to prevent ponding.
- 4** A geotextile can be laid on top of the base course as a separation layer between this and the sandy bedding layer to prevent migration of the particles. This is optional.
- 5** Install edging restraints (if required).
- 6** Place a 15-20mm bedding layer of clean, sharp sand or crusher dust/fines over the base course layer and screed to level, but do not compact.
- 7** Lay SurePave panels on the bedding layer working from left to right with the connecting lugs on the panels leading. Avoid standing directly on the prepared surface – stand on the SurePave panels and ensure they interlock together correctly.
- 8** Panels can be offset by cell increments or cut to shape using simple hand tools e.g. fit around obstructions and curves. The use of cut-pieces which do not have the correct unique, interlocking system should be avoided wherever possible. SurePave also has allocation for pinning to the ground if necessary i.e. on steeper slopes or heavy turning areas.
- 9** Fill the panels with specified angular roading aggregate or decorative gravel to finished levels (7mm – 19mm aggregate size is recommended)
- 10** Use a plate compactor to consolidate the filling material into the pavers. Fill any voids that show due to this process with more specified aggregate until satisfied with the final compaction finish and leave filled material just covering the SurePave panels.
- 11** The surface may be trafficked immediately.

**Maintenance:** Check the surface every 6 months and if settlement of the stone/pebble fill has occurred, add more aggregate to cover the plastic cells. Rake or broom to even the stone/pebble surface.

**Note 1.** The base course will need to be designed to the projected loadings, traffic volume and soil conditions and other contributing factors that correspond directly with the project that SurePave is to be used in.

# SurePave™

## Installation Instructions

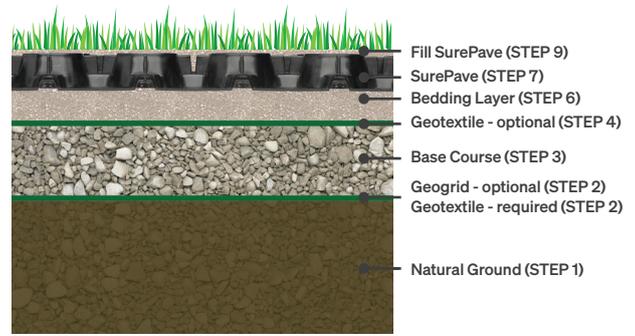

## Grassed Surfaces

- 1** Excavate ground to shape and level to achieve sufficient gradient and load bearing etc. SurePave is suitable for slopes less than 11 degrees in gradient.
- 2** Depending on the soil type and projected traffic loadings, a geotextile is required. For additional strength a geogrid can be used.
- 3** Place and compact a suitable base course material as per Note 1 below ensuring that the area is shaped to sufficient gradients to prevent ponding.
- 4** A geotextile can be laid on top of the base course as a separation layer between this and the sandy bedding layer to prevent migration of the particles. This is optional.
- 5** Install edging restraints and irrigation (if required).
- 6** Place 30mm – 50mm layer of root zone mix consisting of sandy topsoil (70% coarse sand to 30% good screened topsoil) over the base course layer and screed to level, but do not compact.
- 7** Lay SurePave panels on the sandy topsoil layer working from left to right with the connecting lugs on the panel leading. Avoid standing directly on the prepared surface – stand on the SurePave panels and ensure they interlock together correctly.
- 8** Panels can be offset by cell increments or cut to shape using simple hand tools e.g. fit around obstructions and curves. The use of cut-pieces which do not have the correct unique, interlocking system should be avoided wherever possible. SurePave also has allocation for pinning to the ground if necessary i.e. on steeper slopes or heavy turning areas.
- 9** Fill the panels with the same root zone mix as used for the bedding layer, (see step 6), to 10mm above the top of the SurePave panels for consolidation. Use a plate compactor to consolidate the filling material into the paver's. Fill any voids that show due to this process with more root zone mix and leave filling material flush with the SurePave panels.
- 10** Carry out a normal seeding, fertilizing and watering program. A light top dressing may be applied to just cover the seed and to provide adequate germination conditions. Hydro seeding is a good option. Once established, mow as usual. Wear will be dependent on the type of grass used and the frequency of vehicles. To prevent wear on driveways and parking areas, gravel can be used.
- 11** Normal establishment time should be allowed for the grass before the surface is trafficked.

**Maintenance:** Check the surface every 6 months and if settlement has occurred, top up with clean topsoil or sand.

**Note 1.** The base course will need to be designed to the projected loadings, traffic volume and soil conditions and other contributing factors that correspond directly with the project that SurePave is to be used in.

ENHANCING TOMORROW / +61 2 9066 6716 / STROL.COM.AU

# Strol

### DISCLAIMER

All information provided in this brochure is correct to the best knowledge of the company and is given out in good faith. The information presented herein is intended only as a general guide to the use of such products and no liability is accepted by Strol Ltd for any loss or damage however arising, which results either directly or indirectly from use of such information. Strol Ltd have a policy of continuous development therefore information and product specifications may change without notice. This brochure is subject to copyright in its entirety. The contents may not be reproduced in any form, either in whole or in part, without written permission from Strol Ltd. While every effort has been made to ensure the accuracy of the information in this brochure, Strol Ltd assumes no responsibility for errors or omissions or for any consequences of reliance on this catalogue. Copyright 2017. All rights reserved.